



INFORMER

USER MANUAL

- Eight Input Zones
- Each Input Can Be Assigned To A Separate User
- Emergency Alert Switch.
- 8 Individual Sms Alert For Each Zone.
- Built-In Gsm Communicator
- Stores 4 Users & 1 Admin Contact No.
- Sms and/or Calls To 5 Authorized Users
- Editable 15 Bit Sms Alert Message
- Zone - Open, Close Or Both Instant Alert
- 2 Ways Of Control: Sms, Android Apps
- Event Log Info At User Android Mobile Apps.
- Led Indicators For Network Signal & Status.
- Zone Arm/Disarm Through Sms/Android Apps.
- Compact Design



1 Trigger



Mobile
Call Alert



Arming / Disarming
through SMS



Control through
Android App



Store 4 Phone
Numbers




EMERGENCY
Switch

Introduction

Informer is a Eight trigger **GSM** communicator, which can send SMS and make dummy call when trigger is in open/close condition. This device can be controlled through **SMS & Android application.**

LED INDICATORS & EMERGENCY SWITCH

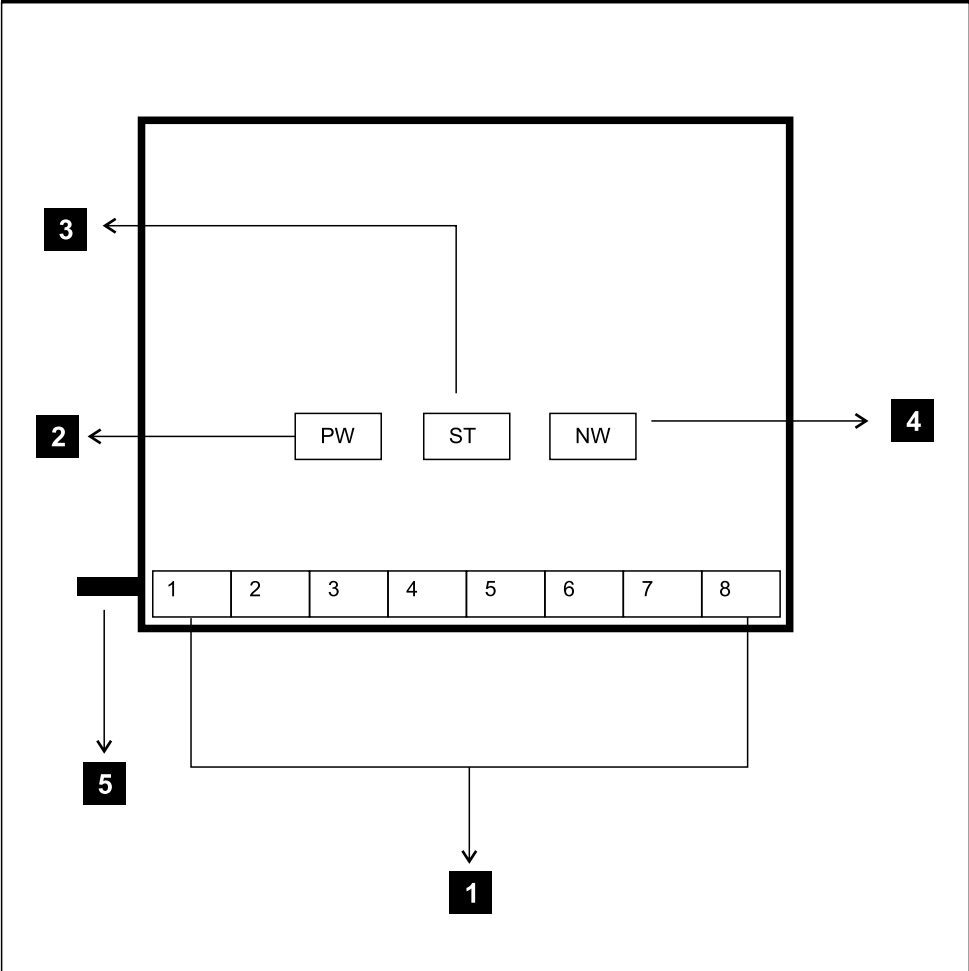

LED INDICATORS & EMERGENCY SWITCH

- 1.LED (1 -8)- Zone indication LED
 - LED will glow when Zone is in open condition.
- 2.LED PW – Power indication LED
 - Will glow when system is ON.
- 3.LED ST – Status LED
 - Will blink while system is sending & receiving SMS.
 - Will be in green color in Deactive state.
 - Will be in Red color in Active state.
- 4.LED NW – Network LED
 - Will blink slowly , when network is good
 - Will blink fast, when network is bad.
- 5.Emergency switch
 - System will send SMS to stored numbers once you press it.
 - It is used for emergency situations.

REGISTER ADMIN

121212

NA:Admin change SUCCESS

- Type **121212** and send SMS to Informer number.
- You would get a reply message **“Admin change success”** which confirms the process.
- Only Admin number can change/access settings of Informer.

SET BALANCE COMMAND

BAL*123#

BL:MA

- Type **BAL*xxx#** and send to Informer from Admin number.(set balance command according to your network).
- You would get a reply message with balance details.

ADD PHONE NUMBERS

PHO2 xxxxxxxxxx

P2: SUCCESS

- Type **PHO2** <Phone number> and send to Informer from Admin number.
- Likewise Type **PHO3,PHO4,PHO5** and add other numbers.
- You would get a reply message **P2 success** which confirms the process
- Likewise you would get **P3, P4, P5 SUCCESS** message when adding those numbers.

SET ALERT MESSAGE

MSG1 12-TEXT-MESSAGE

M1:SUCCESS

MSG2 12-TEXT-MESSAGE

MSG8 12-TEXT-MESSAGE

- Type **MSG1** <12-text message> and send to Informer from Admin number.
- You would get reply message **M1:SUCCESS** which confirms the process.
- Likewise add **MSG2, MSG3, MSG4, MSG5, MSG6, MSG7, MSG8.**
- You can add **8** messages for eight zones.

SET ALERT CONDITION

OPEN ALERT

ALT 00000000

SALT:00000000:SUCCESS

- For Open alert in all ZONES ,Type **ALT 00000000** and send to Informer from Admin number
- You would get a reply message **SALT:00000000:SUCCESS** which confirms the process.

CLOSE ALERT

ALT CCCCCCCC

SALT:CCCCCCCC:SUCCESS

- For Close alert ,Type **ALT CCCCCCCC** and send to Informer from Admin number
- You would get a reply message **SALT:CCCCCCCC:SUCCESS** which confirms the process.

BOTH OPEN&CLOSE ALERT

ALT SSSSSSSS

SALT:SSSSSSSS:SUCCESS

- For Both Open &Close alert, Type **ALT SSSSSSSS** and send to Informer from Admin number
- You would get a reply message **SALT:SSSSSSSS:SUCCESS** which confirms the process.

SET ALERT CONDITION

ALT CSCSOCOC

- To set different alert conditions for each Zone:

Example: If you want

Zone 1 - close (c)

Zone 2 - both (s)

Zone 3 - close (c)

Zone 4 - both (s)

Zone 5 - open (o)

Zone 6 - close (c)

Zone 7 - open (o)

Zone 8 - close (c)

Just Type ALT CSCSOCOC

and send to Informer

fromAdmin

number.(Likewise you can

set alert conditions which

you want for each ZONES.)

SALT:CSCSOCOC:SUCCESS

- You would get a reply message **SALT:CSCSOCOC:SUCCESS** Which confirms the process.

SET ALERT TYPE

BOTH CALL & SMS ALERT

CS YY

- For both call & sms alert, Type **CS YY** and send to Informer from Admin number

CS:SUCCESS

- You would get a reply message **CS SUCCESS.**

ONLY CALL ALERT

CS YN

- For only call alert, Type **CS YN** and send to Informer from Admin number

CS:SUCCESS

- You would get a reply message **CS SUCCESS.**

ONLY SMS ALERT

CS NY

- For only sms alert, Type **CS NY** and send to Informer from Admin number

CS:SUCCESS

- You would get a reply message **CS SUCCESS.**

ASSIGN PHONE NUMBERS TO ZONES.

The Device has memory available to store 5 Phone numbers which includes 1 admin number. You can Assign all 5 Phone Numbers to Zones which you wish in 8 zones which are available. Once set, the Phone Numbers will receive alerts from those particular zones. You can assign multiple phone numbers with same zones also.

ZP

- Type **ZP** and send SMS to Informer number to know status of Phone numbers assigned to zones.

ZP:
P1 - 12345678
P2 -
P3 -
P4 -
P5 -

- You would get a reply message with status.
- As Default Phone number 1 will be assigned to all eight zones & rest of phone numbers would be empty without being assigned.

ZP1 2348

- To change Phone Numbers 1's Default assigned zones,
- Type **ZP1 <12345678>** (You can select the Zones which you want to assign to Phone number 1).
- Example: If you want Phone number 1 to get alerts of zones 2,3,4,8.
 - Type **ZP1 2348** and send to informer number.

SZP:SUCCESS

- You Would Get reply Message **SZP:SUCCESS** Which Confirms the process.

ZP2 5678

ZP3 123456

ZP4 234568

ZP5 12348

- Likewise assign zones for all phone numbers using commands
 - o **ZP2** for Phone Number 2,
 - o **ZP3** for Phone Number 3,
 - o **ZP4** for Phone Number 4 &
 - o **ZP5** for Phone Number 5

DEACTIVATE ALERTS FOR PHONE NUMBERS

ZP1 D

ZP1D:SUCCESS

ZP2 D

ZP3 D

ZP4 D

ZP5 D

- To Deactivate the Zone Alerts For Phone number 1, Type **ZP1 D** and send to informer number.
- You Would Get a reply Message as **SZP1 D:SUCCESS** Which Confirms the Process.
- Like Wise you can Deactivate Zone alerts For other phone numbers using commands-
 - o **ZP2 D** for Phone Number 2,
 - o **ZP3 D** for Phone Number 3,
 - o **ZP4 D** for Phone Number 4 &
 - o **ZP5 D** for Phone number 5.

ACTIVATE ALERTS FOR PHONE NUMBERS

After Deactivating, Once again If you wish to activate alerts for Particular phone numbers, Follow below Commands,

ZP1 A

- To Activate the Zone Alerts For Phone number 1, Type **ZP1 A** and send to informer number.

ZP1A:SUCCESS

- You Would Get a reply Message as **SZP1 A:SUCCESS** Which Confirms the Process.

ZP2 A

ZP3 A

ZP4 A


 
ZP5 A

- Like Wise you can Activate Zone alerts For other phone numbers using commands-
 - o **ZP2 A** for Phone Number 2,
 - o **ZP3 A** for Phone Number 3,
 - o **ZP4 A** for Phone Number 4 &
 - o **ZP5 A** for Phone number 5.

 
 
ACTIVATION OF INFORMER

ACTIVATE ALL ZONES

Only Admin can Activate the system

 <p>ACTA</p>	<ul style="list-style-type: none"> To Activate all Zones, type ACTA and send to Informer from Admin number.
 <p>SACTA:SUCCESS</p>	<ul style="list-style-type: none"> You would get a reply message SACTA: SUCCESS which confirms Activation.

TO ACTIVATE INDIVIDUAL ZONES

 <p>ACT 2468</p>	<ul style="list-style-type: none"> To Activate individual Zones ,Type ALT <Zones which you want to Activate> and send to Informer from Admin number. For example if you want to Activate ZONES 2,4,6,8. Type ALT 2468 and send to Informer from Admin number.
 <p>SACT:SUCCESS</p>	<ul style="list-style-type: none"> You would get a reply message SACT: SUCCESS which confirms Activation.

DEACTIVATION OF INFORMER

DEACTIVATE ALL ZONES

Only Admin can Deactivate the system

<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px; width: 80%;">DAA</div> <div style="border: 1px solid black; padding: 5px; width: 80%;">SDAA:SUCCESS</div>	<ul style="list-style-type: none"> To Deactivate all Zones, type DAA and send to Informer from Admin number. You would get a reply message SDAA: SUCCESS which confirms Deactivation.
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

TO DEACTIVATE INDIVIDUAL ZONES

<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px; width: 80%;">DA 2468</div> <div style="border: 1px solid black; padding: 5px; width: 80%;">SDAA:SUCCESS</div>	<ul style="list-style-type: none"> To Deactivate individual Zones ,Type DA <Zones which you want to Deactivate> and send to Informer from Admin number. For example if you want to Deactivate ZONES 2,4,6,8. Type ALT 2468 and send to Informer from Admin number You would get a reply message SDAA: SUCCESS which confirms Deactivation.
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

TO CHECK STATUS

STS

- To check Informer status, Type **STS** and send to Informer from Admin number.

ST:
 Z1-
 Z2-
 Z3-
 Z4-
 Z5-
 Z6-
 Z7-
 Z8-
 SMS-
 CALL-

- You would get a reply message with status of Informer.

TO CHECK BALANCE

BAL

- To check Balance, Type **BAL** and send to Informer from Admin number.

BL:M/A Bal :Rs 00.09:
 M/A Val :01 Jan 2020

- You would get a reply message with balance details.

TO CHECK PHONE NUMBERS STORED

PHO

PR:
P1-XXXXXXXXXX
P2-XXXXXXXXXX
P3-XXXXXXXXXX
P4-XXXXXXXXXX
P5-XXXXXXXXXX

- To check Phone numbers stored, Type **PHO** and send to Informer from Admin number.
- You would get a reply message with Phone numbers stored in Informer.

TO CHECK ALERT MESSAGE STORED

MSG

MR:
M1- <12-TEXT-MESSAGE>
M2- <12-TEXT-MESSAGE>
M3- <12-TEXT-MESSAGE>
M4- <12-TEXT-MESSAGE>
M5- <12-TEXT-MESSAGE>
M6- <12-TEXT-MESSAGE>
M7- <12-TEXT-MESSAGE>
M8- <12-TEXT-MESSAGE>

- To check alert message stored, Type **MSG** and send to Informer from Admin number.
- You would get a reply message with alert message stored in Informer.

How to Change Admin Number???

PHO1 xxxxxxxxxxxx

P1:SUCCESS

- To Change Admin Number , Type **PHO1** <New number> and send to Informer from present admin number.
- You would get a reply message as **P1:SUCCESS** which confirms Admin change.

How to Reset Informer ??

RST

RT:Master Reset SUCCESS

- To Reset Informer,Type **RST** and send to Informer from Admin number.
- You would get a reply message **RT: Master Reset SUCCESS**, which confirms the process.
- Once **RESET** all stored numbers and settings will be deleted , Admin number will remain same.

EMERGENCY ALERT SWITCH

- The Device Consists of an Emergency Switch, Once Pressed, the device sends alert SMS to all phone numbers stored.

KP: EMERGENCY ALERT SWITCH

SMS COMMANDS USED IN INFORMER

BAL	BALANCE
PHO2 XXXX	ADD PHONE NUMBERS
MSG1 <15 TEXT MESSAGE>	ALERT MESSAGE
ALT 0/C/S	ALERT CONDITION
ACT	ACTIVATION
DA	DEACTIVATION
PHO	TO CHECK PHONE NUMBERS STORED
MSG	TO CHECK ALERT MESSAGE STORED
STS	TO CHECK STATUS
CS YY	ALERT TYPE

- **Notes :**
- You would get all sms commands as a message when you send any wrong commands to Informer.
- If operations are not successful you would get FAILED message as reply.

POWER SUPPLY

Max Power Consumption	:	24 watts
Supply Voltage	:	12-24 V
Total current Rating	:	2 amp (max)

ZONES


Zone Response Time	:	< 500 Millisecond
Zone Loop Resistance	:	< 5 kilo Ohm For Normally Closed
Max Length of Sensor Cable (multi core cable)	:	150 m (Depends on cable resistance)
GSM Antenna	:	3 db

ENVIRONMENTAL

Environment	:	Residential/ Commercial/ Light Industrial
Max Humidity	:	95% Non-Condensing
Operating Temperature	:	0°C To 45°C
Storage Temperature	:	-20°C~ + 60°C

PHYSICAL

Colour	:	RED, BLACK
Control Panel Dimensions(mm)	:	(H X W X L)=115 X 25 X 110
Weight	:	125 g

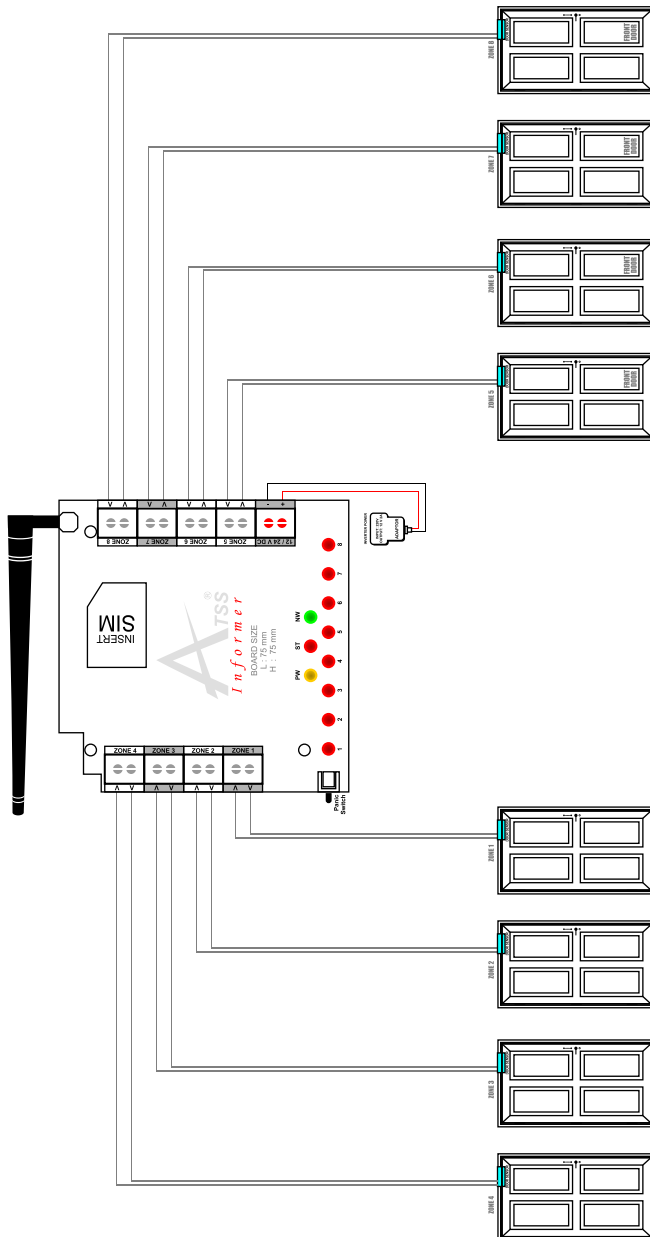

INFORMER WARRANTY



Customer Name :

Invoice No :

Date :

Serial No :

Signature

How To Obtain Warranty Service?

You must present your Warranty Card and a copy of your original sales receipt to validate warranty coverage. DO NOT lose your receipt.

Dealer Seal



No.40, Muthumariamman Koil St,
Navalar Nagar, Anna Nagar West,
Chennai - 600 040. India.

